

## Warranty

All retail parts carry a 90-day warranty from the date of purchase. This warranty covers defects in materials or workmanship, and does not include (i) normal wear and tear, environmental conditions, improper installation; (ii) road hazards, misuse, abuse, neglect, accidents, collision, fire, theft, freezing, vandalism, riot, explosion, or objects striking the vehicle; (iii) misusing the vehicle, such as driving over curbs, overloading, racing, or using the vehicle as a stationary power source; (iv) altering, disassembling or modifying the parts; (v) defects caused or induced by failures, breakdowns, or damage by other parts, components or the vehicle; (vi) subjecting the parts to excessive moisture or water or any motor vehicle fluids (e.g.: oil, anti-freeze, battery acid, brake fluid, etc.); (vii) acts of God, natural disasters and other similar causes beyond the reasonable control of MRT; (viii) application of chemicals that affect the parts; or (ix) damaged caused by automated car washes. This Limited Warranty does not cover surface deterioration of paint, trim, and appearance items that result from use and/or exposure to the elements, such as stone chips, scratches, bird droppings, lightning, hail, windstorm, dings, dents, earthquake, road salt, tree sap, water or flood.

**MRT SHALL NOT BE LIABLE TO REIMBURSE CUSTOMER/DEALER FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE INSTALLATION OR USE OF ANY PRODUCT SOLD THROUGH THIS CATALOG OR ARISING OUT OF ANY BREACH OF WARRANTY, EXCEPT AS MAY BE STATED IN THIS CATALOG, MRT DISCLAIMS ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL MRT'S LIABILITY EXCEED THE PRICE PAID BY CUSTOMER/DEALER FOR PRODUCTS SOLD REGARDLESS IF MRT HAS BEEN ADVISED IN ADVANCE OF ANY POTENTIAL PROBLEM OR IF A CLAIM IS BASED ON CONTRACT, TORT, STRICT LIABILITY. PRODUCT LIABILITY OR OTHERWISE. SOME STATES DONOTALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES OR THEIR DURATION, OR LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY.**

 


### Tools & Materials Required

1. Phillips Screwdriver
2. Pen
3. Masking Tape
4. Scissors
5. 11/32 Wrench
6. Tape Measure



### Louver Install

1. Clean Window with Isopropyl Alcohol. Place a 5" piece of masking tape on center top edge of glass. Mark center of glass on tape with a pen.
2. Cut Out Template. Center and tape it on upper part of glass.
3. Apply adhesion promoter in upper pad areas. Close the packet to slow evaporation.
4. Peel the tape from the hinge pads and mount in place.
5. Burnish with the back end of a screw driver.
6. Attach the Hinges to the louver at the top about 9/16" from the bottom of the hinge pads. Put washer plates over hinges and apply the nuts loosely. Then align the louvers so they fit aligned to the glass at the top and centered in the window.
7. Tighten the hinge nuts with 11/32" wrench.
8. Secure the latch pads on the lower latch clips. Lower the louver to check pad locations while pressing on the lower center to hold the feet down. Then use masking tape to frame the area and apply promoter to the area, and stick in place.
9. Slip Corner Clips beneath the louver's top corners. Touch to glass to secure when in position. Allow 24 hours for tape to cure prior to exposing to direct sun or freezing conditions.

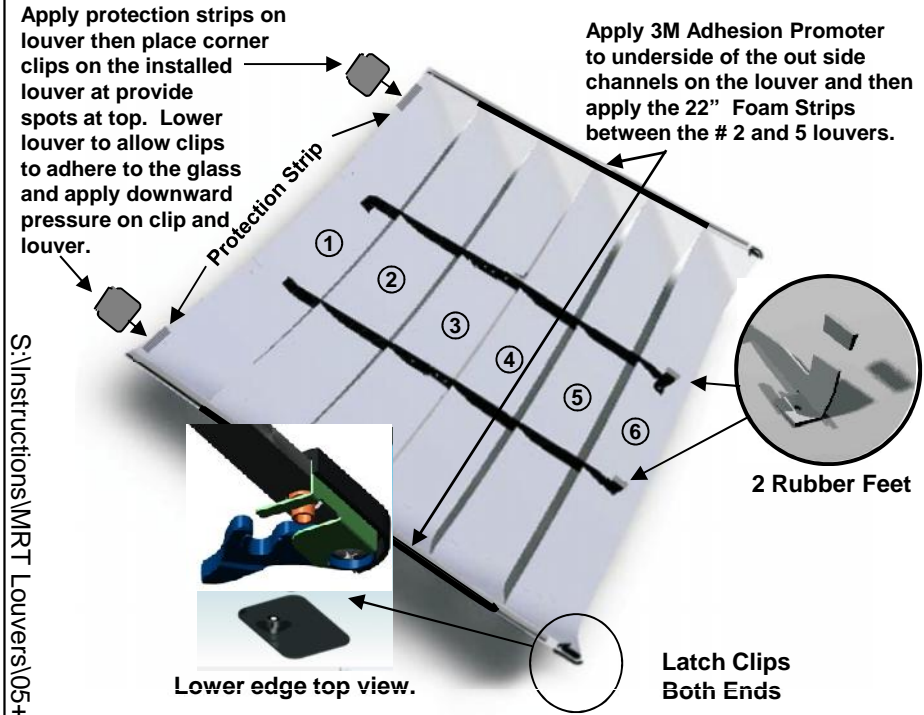


S:\Instructions\MRT Louvers\05+ MRT Louver Instructions Version 2.ppt

6D

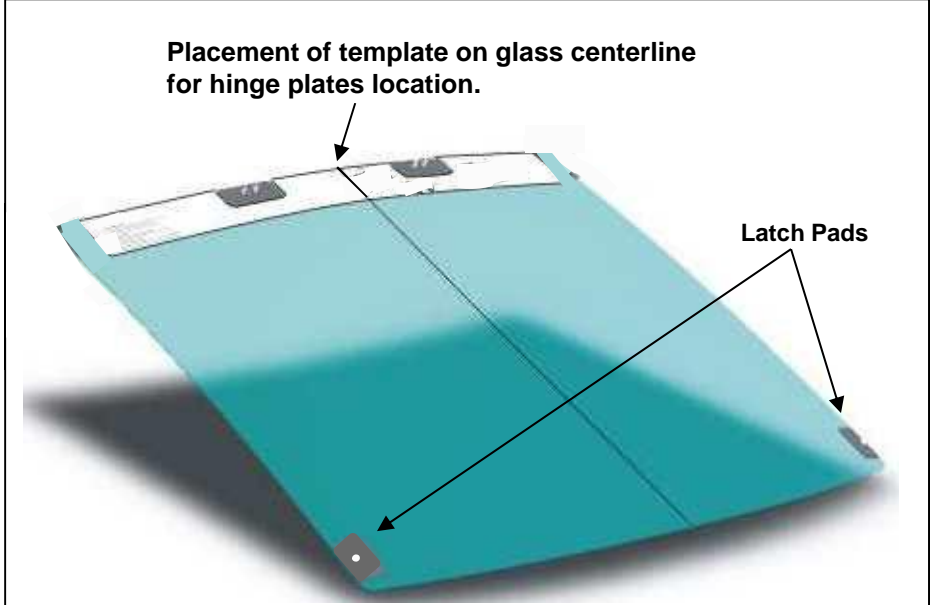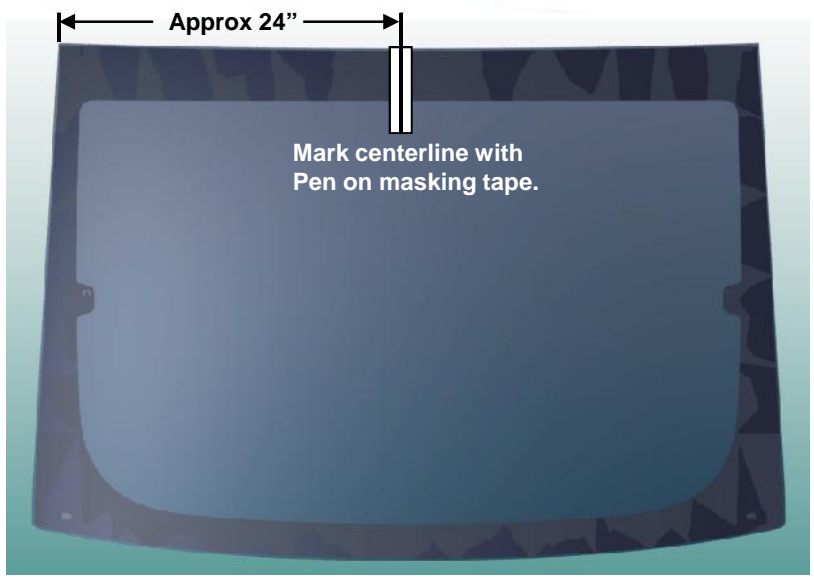

Hinge shown without louver

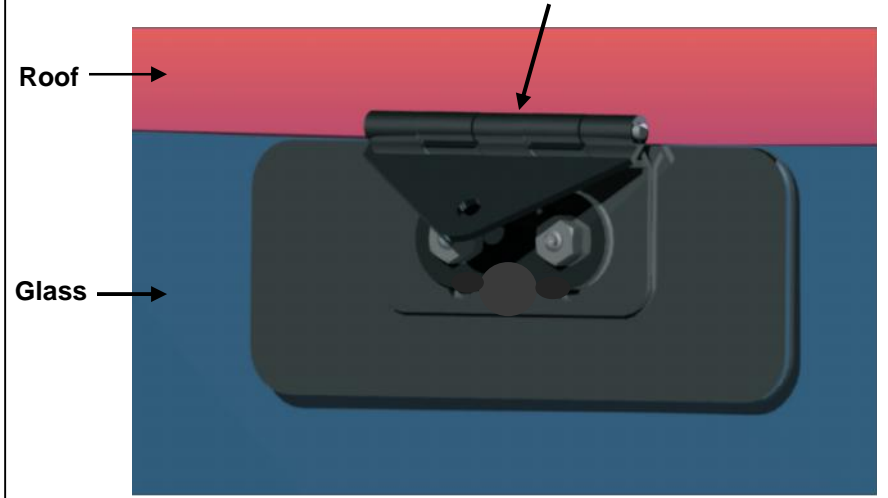 

With louver raised up mount louver with hinge spacing shown above.

**Note:** Allow 24 hours for adhesive to cure prior to exposing to direct sun or below freezing conditions