



PART #1216

2010-2012 MUSTANG HEAT EXTRACTOR HOOD

**Notice: Install new, unpainted parts according to these instructions!
If Painting, remove parts, paint them and re-install.
Painted or Altered Parts are Non-Refundable!
(Excludes Cervini Pre-painted Parts)**

Step 1

Remove the striker bar from the factory hood and install it with Loctite® to your new hood.

Step 2

Adjust hood until proper alignment with matching panels is achieved.

Step 3

Adjust primary latch until the striker bar fits into the latch. Make sure when the hood is closed you can hear the striker bar “click” into the latch.

Step 4

After you here it click, test it to be sure it's working properly by grabbing the front edge of the hood and slowly pulling upward with steady even pressure. If the hood opens, it's not adjusted properly; repeat STEP 3 until hood cannot be pulled open after it's closed.

WARNING: MAKE SURE THE SAFETY CATCH IS WORKING PROPERLY!


Step 5

To ensure the safety catch is working properly, close the hood, pull the hood release from inside the car and the hood will partially open. Slowly pull up on the hood while firmly shaking up and down. If it opens without pulling the safety catch lever then the latch needs to be readjusted. The safety catch prevents the hood from opening in the event the primary latch fails.

PART # 1216		
QTY	DESCRIPTION	HARDWARE #
6	SHORT PHILIPS SCREWS	10947-01704
2	SQUIRTERS	BER001
1	TEE	WE2426
3	ELBOW	5116K29
31"	RUBBER TUBING	51075K24
4	3/16" HOOKUP WASHERS	90183A215
2	SCREENS	E


Step 6

Locate the hood stoppers  found on the radiator support. Adjust upward until they apply a small amount of pressure to the underside of the hood when it's closed. This will prevent the hood from shaking or rocking. Install windshield washer squirters **as shown in Fig. A.**

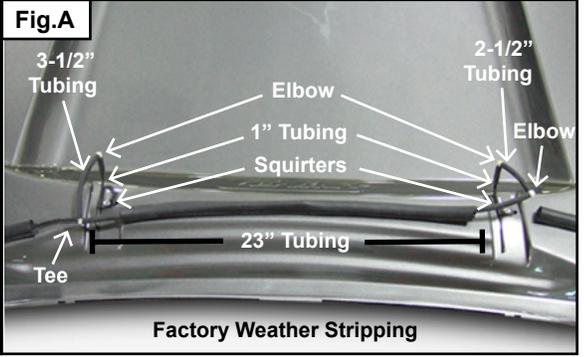

Step 7

After all adjustments have been made, reinstall the weather stripping on the rear of the hood. You will need to cut it so that it does not cross over top of the squirters. Cut the factory squirter hose before the first squirter connection **as shown in fig.B.**

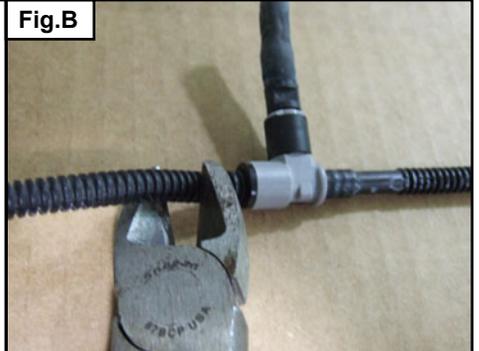


Step 8

Run the squirter hose through the weather stripping and connect it to the squirter **as shown in fig.C.**
(You may need to bend the squirters into position.)



Step 9

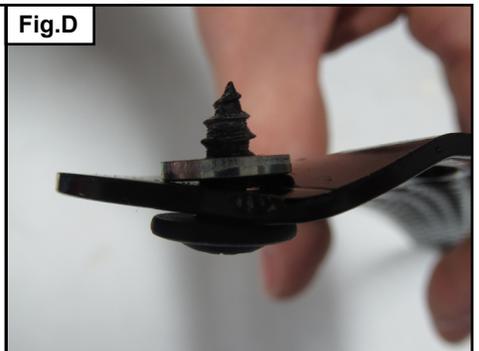

Step 10

