

PART #134 & #139


94-04 CHEVY S-10 HOODS

Notice: Prefit Before Painting!
Painted or Altered Parts are Non-Refundable

- STEP 1: Open factory hood and remove phillips screws on cowl panel extensions (left and right pieces only).
- STEP 2: Close hood and remove cowl panel extensions by pulling upward.
- STEP 3: Remove factory hood and install Cervini hood, adjust hood until proper alignment with matching panels is achieved.
- STEP 4: Adjust primary latch until it fits into the latch bar on the hood.
Make sure when the hood is closed you can hear the latch "click" onto the hood.
- STEP 5: After you here it click, test it to be sure it's working properly by grabbing the front edge of the hood and slowly pulling upward with a steady even pressure. If the hood opens it's not adjusted properly; repeat STEP 4 until hood cannot be pulled open after it's closed.

WARNING: MAKE SURE SAFETY CATCH IS INSTALLED & WORKING PROPERLY!

- STEP 6: The safety catch is bolted to the underside of the hood. Transfer the safety catch and pop-up spring from your original hood to our hood. Make sure the safety catch hook grabs onto its matching bracket mounted on the radiator support.
- STEP 7: To ensure the safety catch is working properly, close the hood, pull the hood release from inside the car and the hood will partially open. Slowly pull upward on the hood and jiggle it at the same time. If it opens without pulling the safety catch lever then it needs to be readjusted. The safety catch prevents the hood from opening in the event the primary latch fails.
- STEP 8: Locate the hood stoppers  located on each side of the radiator support. Adjust upward until they apply a small amount of pressure to the underside of the hood when it is closed. This will prevent the hood from shaking or rocking.
- STEP 9: For installation of squirters, follow Fig. A. Install the provided tubing clips in the pre-drilled holes under the hood to secure the hoses.

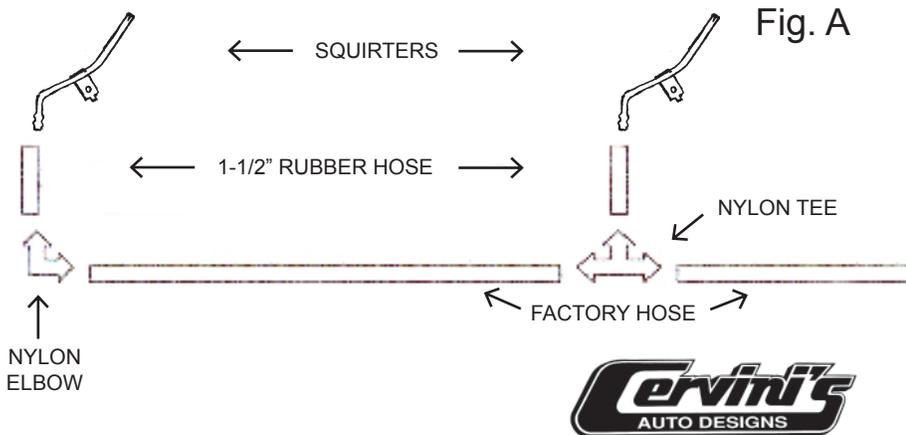

PART #134 & #139		
QTY	DESCRIPTION	HARDWARE #
2	HEX BOLTS	13003
2	WASHERS	33004
7	FLAT HEAD PHILLIPS	32144
2	SQUIRTERS	BER001
2	1-1/2" RUBBER HOSE	51075K24
1	NYLON ELBOW	5116K29
1	NYLON TEE	5116K14
3	TUBING CLIPS	WE2546
3	TURN BUTTONS	SV25600
4	SMALL BLACK SCREWS	10947-01704