

**PART #143 & #144****88-91 HONDA CIVIC HOODS**

**Notice:** **Prefit Before Painting!**  
**Painted or Altered Parts are Non-Refundable**

STEP 1: Adjust hood until proper alignment with matching panels is achieved.

STEP 2: Adjust primary latch until it fits into the latch opening on the radiator support.  
 Make sure when the hood is closed you can hear the latch "click" onto the hood.

STEP 3: After you here it click, test it to be sure it's working properly by grabbing the front edge of the hood and slowly pulling upward with a steady even pressure. If the hood opens it's not adjusted properly; repeat STEP 2 until hood cannot be pulled open after it's closed.

**WARNING: MAKE SURE SAFETY CATCH IS INSTALLED & WORKING PROPERLY!**


STEP 4: The safety catch is bolted to the underside of the hood. Make sure the safety catch hook grabs onto its matching bracket mounted on the radiator support.

STEP 5: To ensure the safety catch is working properly, close the hood, pull the hood release from inside the car and the hood will partially open. Slowly pull upward on the hood and jiggle it at the same time. If it opens without pulling the safety catch lever then it needs to be readjusted. The safety catch prevents the hood from opening in the event the primary latch fails.

STEP 6: Locate the hood stoppers  located on each side of the hood. Adjust downward until they apply a small amount of pressure to the underside of the hood when it is closed. This will prevent the hood from shaking or rocking.

STEP 7: For installation of squirters, follow **Fig. A. Install the provided tubing clips in the pre-drilled holes under the hood to secure the hoses.**

**Fig. A**

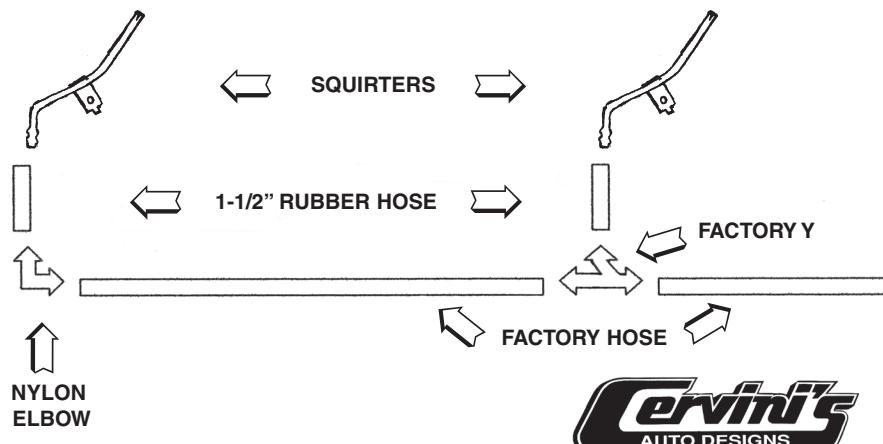

<b>PART #143 &amp; #144</b>		
QTY	DESCRIPTION	HARDWARE #
2	1/4"x20x5/8" BOLTS	92865A938
4	1/4"x20 NUTS	90473A029
2	SQUIRTERS	2976377
4	FLAT HEAD PHILLIPS	WE2226
6	1/4"x20 WASHERS	90108A029
4	TUBING CLIPS	WE2546
2	STOPPERS	9405K54
1	NYLON ELBOW	5116K29
2	1-1/2" RUBBER HOSE	51075K24
1	BLOCK OFF	344 or 345