

MARKER LIGHT INSTRUCTIONS FOR PART #4320 & #4326 M1 HOOD SCOOP

Installing Marker Light Harness:


With the hood open, route the new harness **as shown with a dotted line in Fig A.** Locate the factory harness on the top of the radiator support behind the passenger headlight **as indicated in figure A.** In the factory harness you will find a Gray wire with a Black stripe and connect this wire to the new wire (Gray with Red stripe) from the new harness. Connection is to be made by exposing the factory copper wire and soldering the new wire in place. Find the Blue wire with Orange stripe in the factory harness and connect the new wire (Blue with Yellow stripe) from the new harness. Connection is to be made by exposing the factory copper wire and soldering the new wire in place. Once the soldering is complete and cooled down, wrap the area in electrical tape. Push the wires back into the factory wire loom, and tape where necessary. Attach the black ground wire where indicated **as shown in Fig B.** We have supplied you with tubing clips & zip ties, for attaching the new harness to the bottom of the hood and along side the factory harness.

FIG A.



Factory Wire Harness

FIG B.

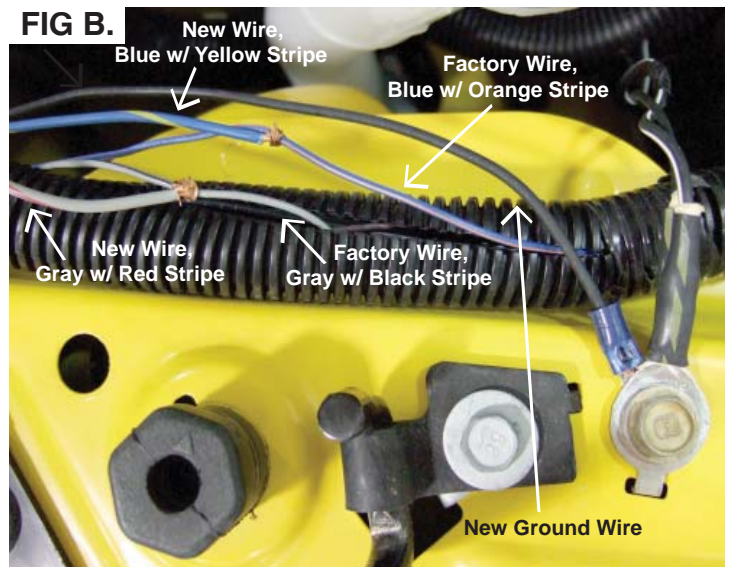

PART #4320 & #4326		
QTY	DESCRIPTION	HARDWARE #
5	TUBING CLIPS	WE2546
8	ZIP TIES	70215K53
1	HARNESS	CAS-105037
1 SET	SIGNAL LAMPS	C9ZZ13A355A

