


Part #4410 & #4437 2005-2009 Ford Mustang & GT500 Radiator Cover

**Notice: Install new, parts according to these instructions!
Altered Parts are Non-Refundable!**

Step 1

Remove the plastic push pins holding the factory radiator cover in place using a flat head screw driver **as shown in fig. A**. Remove the radiator cover from the car. Also remove the push pins on the top of both Left & Right headlight mounting brackets **as shown in fig B**.

Fig.A

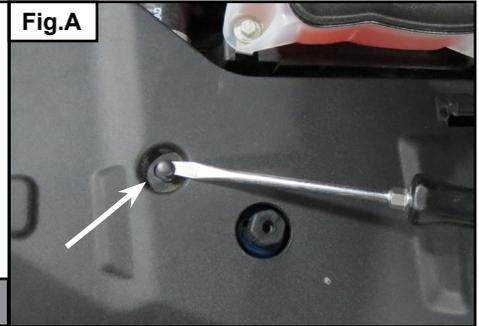

TOOL: FLAT HEAD SCREWDRIVER

Step 2


NOTE: THIS STEP WILL REQUIRE TWO PEOPLE.

With one person holding the hood open, remove the prop rod using a 10mm socket.

* If the prop rod is being re-used, drill the 2 holes through the new radiator cover before installing.

* If you have hood struts, the drilling of the holes is not needed.

Fig.B

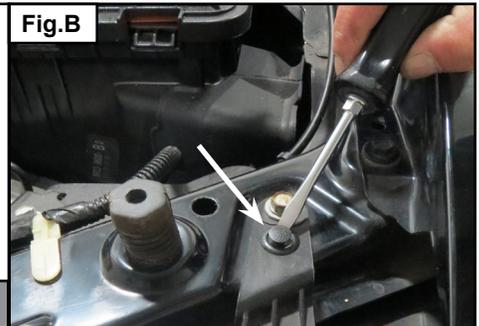


TOOL: 10MM RATCHET & SOCKET, 1/4" DRILL BIT

Step 3

In your hardware packet there is: (2) opposing pieces of Velcro (attached), (1) Spacer, (1) piece of 4" 2-Sided Tape. The Velcro needs to stay together until the installation is complete. Clean the area on your radiator support **as shown in fig.C** with rubbing alcohol. Wipe the aluminum spacer on the top and bottom with the rubbing alcohol. Cut the 2-sided tape in half to make (2) 2" pieces and attach them on one side of the spacer.

Fig.C

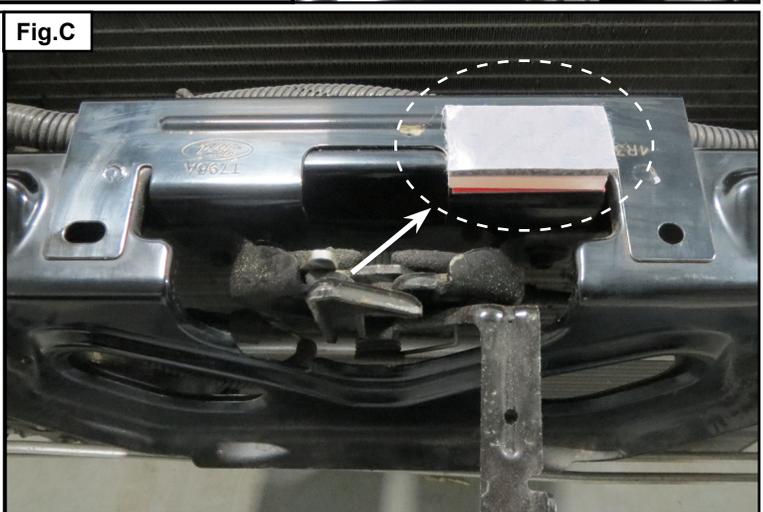


PART #4410 & #4437		
QTY	DESCRIPTION	HARDWARE #
1	2" VELCRO PIECES	91365
1	PROP ROD HOLDER	CLACC6-BK
2	PLASTIC PUSH PINS	WE2863
1	4" PIECE 2-SIDED TAPE	4INCH
1	1" X 2" SPACER	

TOOL & MATERIAL LIST
FLAT HEAD SCREW DRIVER
10MM RATCHET & SOCKET
1/4" DRILL BIT (IF RETAINING THE OEM HOOD PROP-ROD)
RUBBING ALCOHOL

Step 4

In your hardware packet there is a section of Velcro. This Velcro has a hard plastic side and a softer material side. Remove the clear backing on the hard plastic side of the Velcro and attach to the top side of the spacer. Remove the red backing from the 2-sided tape already applied to the bottom side of the spacer and attach to the radiator support in the area **as shown in Fig. C.**

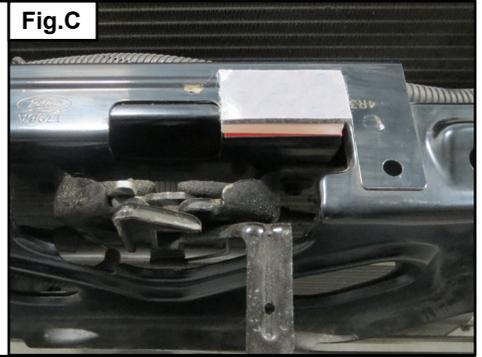Fig.C**Step 5**

Remove the clear backing on the top side of the Velcro. (2 people are needed for the next step). Clean the area where the velcro will come in contact with the radiator cover with rubbing alcohol. Install the new Cervini radiator cover in place with the 2 new plastic push pins provided in the hardware packet. The push pins need to be installed on the left and right side of the radiator cover **as shown in Fig.D.** Re-install the remainder factory push pins.

**DO NOT REMOVE RADIATOR COVER FOR 24 HOURS,
THE VELCRO NEEDS TO ADHERE TO THE RADIATOR COVER!**

Fig.D