

PART# 7080 GT-500 BILLET GRILLE

Pre-fitting the billet grille: Remove the wire harness clip and the hood release cable clip from the radiator support and let them hang. Place the billet grille in the top mouth opening of the bumper. Center the grille in the mouth opening and make sure the grill mounting points line up with the car.

Installing the billet grille: Aline the bottom tabs of the billet grille with the factory grille locations in the bottom of the mouth opening. Aline the top mounting locations of the grille with the factory holes in the radiator support **as shown in fig A**. On the driver side of the grille install the hood release cable clip into the first hole of the top mounting location **as shown in fig B**. Next push the grille into position with the top tabs of the grille under the radiator support and the bottom tabs slid into the factory grille locations. Use the supplied bolt, nut, and lock washer to secure the top of the grille to the radiator support. On the driver side use the second hole to mount the grill to the radiator support and on the passenger side use the first hole to mount the grill to the radiator support **as shown in fig C**. Now that the grille is secure, push the wire harness clip into the second hole on the top tab of the grill **as shown in fig D**. To reinstall the cobra emblem, use a razor knife to cut the top and bottom ribs off the mounting locations of the emblem **as shown in fig E**.

Fig. A

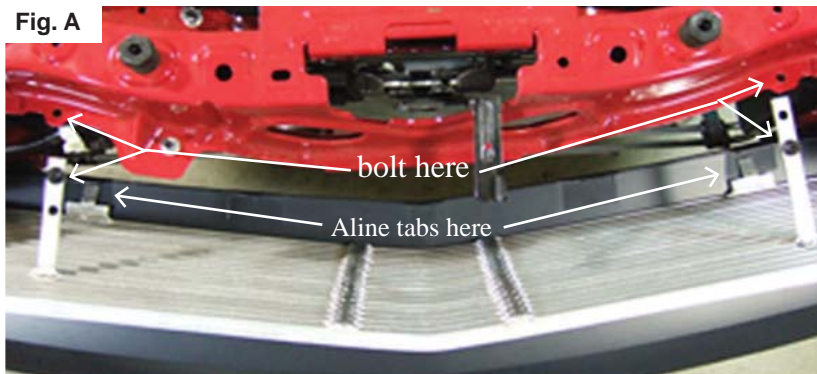


Fig. B

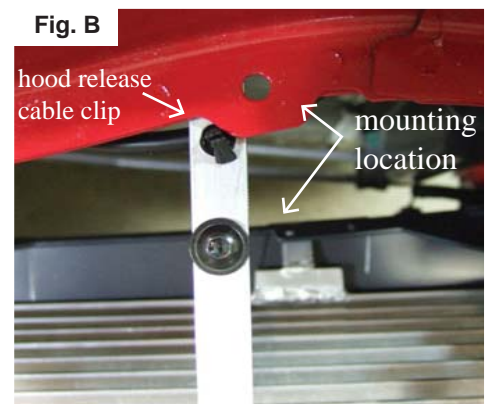


Fig. C

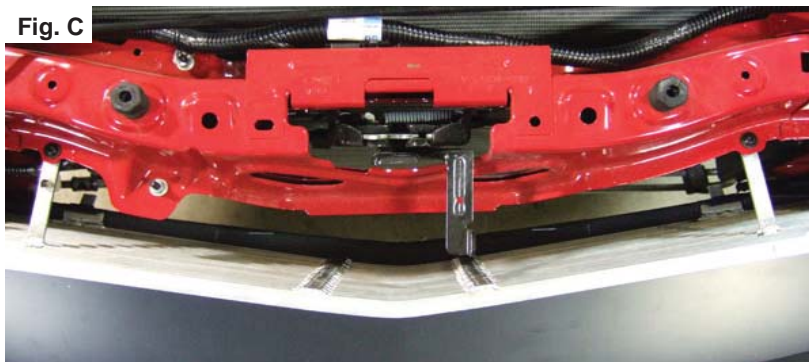


Fig. D


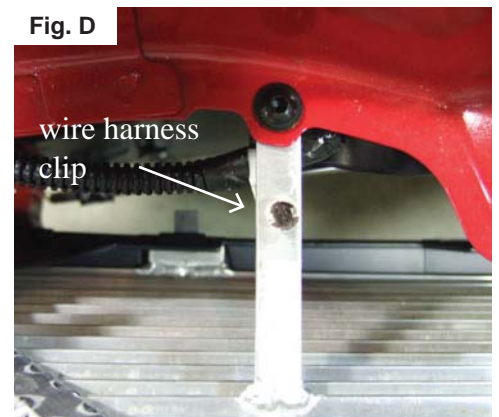


Fig. E



PART #7080		
QTY	DESCRIPTION	HARDWARE #
2	BLACK ALLEN BOLTS	91355A082
2	LOCK WASHERS	91102A029
2	NUTS	36102

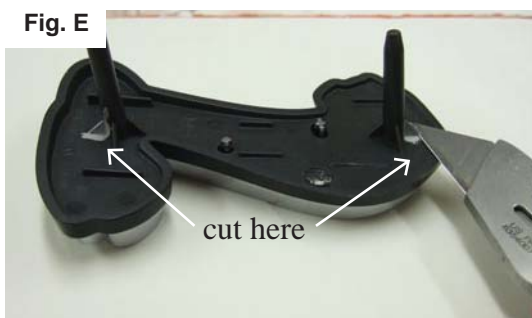