


Part # 7253

2010-2012 Ford Mustang Upper Billet Grille

**Notice: Install new, unpainted parts according to these instructions!
Then remove parts, paint them and re-install.
Painted or Altered Parts are Non-Refundable!**


Step 1

Remove radiator shroud cover by removing the seven plastic retaining pins with a flat-headed screwdriver.

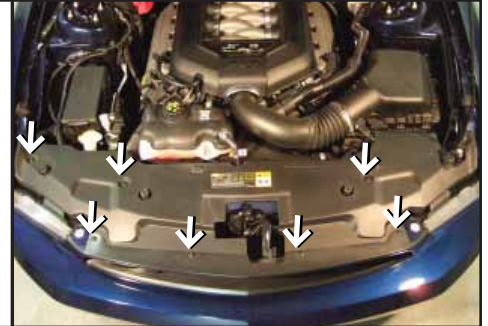

Step 2

Remove the upper headlight mounting bolt (10mm), and upper bumper cover mounting bolt (8mm). (Driver side shown, remove the same bolts on Passenger Side)

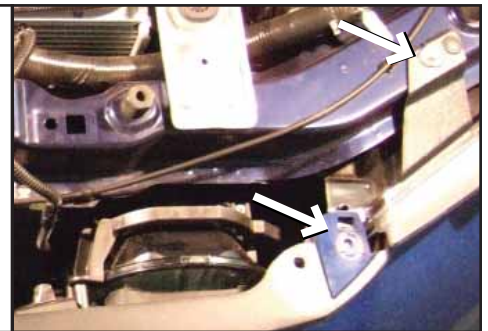

Step 3

Use a flat-head screwdriver to pry the four outer tabs of the grille (two on each side). Once these outer tabs are loose, carefully but firmly pull up and out on the grille to fully release it from the bumper cover. Unplug the fog light wiring harness before completely removing grille.



PART # 7253		
QTY	DESCRIPTION	HARDWARE #
4	SMALL BLACK SCREWS	10947-01704
1	RUNNING HORSE	

Step 4

Remove the three 7mm bolts from each fog light and remove them from the grille.

**Step 5**

Now remove the inner grille assembly from the outer grille shell.

**Step 6**

Place the billet grille inside the outer grille shell. Position the Billet grille centered in the Grille shell. Using a 3/16" drill bit, drill 4 holes where the attached L bracket mounting holes are. Install screws to fasten the Billet Grille to the Grille Shell. Installation of grille shell is reverse of removal.

