

Part # 7300

2005-2014 Cervini’s Mustang Hood Struts


Notice: Install new parts according to these instructions!
Altered and/or painted parts are Non-Refundable!

Step 1

Open your hood and support it with the prop rod. Make sure your hood is secure before installing Cervini’s Hood Struts. Protect your fenders with an apron or towel as shown in Fig. A.

*The following instructions will be shown on the left side of the vehicle. After completion repeat steps on opposite side.


Fig. A

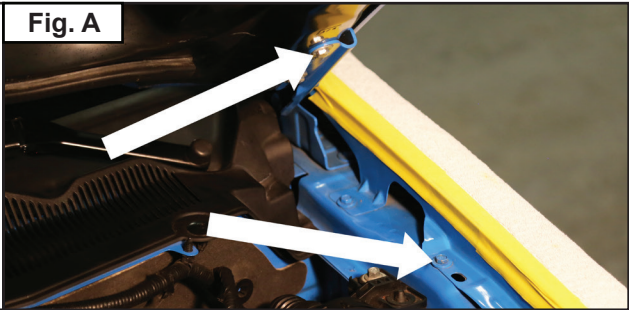

Step 2 Tools: 1/4 Drive Ratchet, 10mm Socket

Remove fender apron bolts as shown in Fig. B.


Fig. B

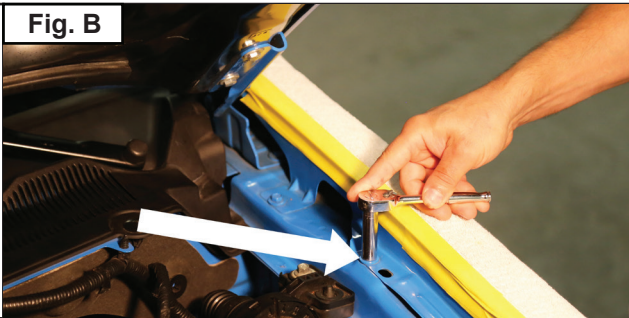

Step 3 Tools: 1/4 Drive Ratchet, 10mm Socket

Install Cervini’s apron bracket (067Left) as shown in Fig. C.

Fig. C

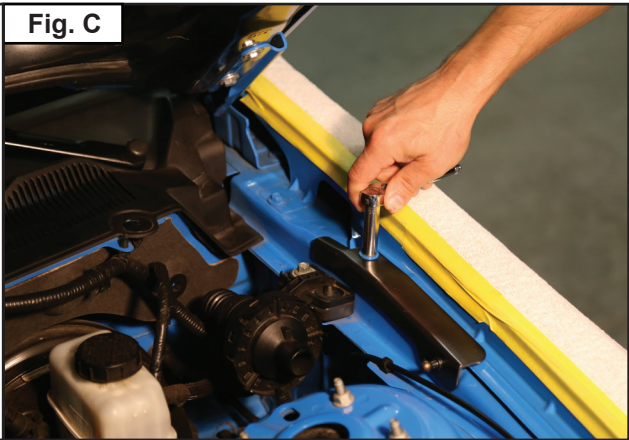

PART # 7300		
QTY	DESCRIPTION	HARDWARE #
1	HOOD STRUT HINGE-A	066A
1	HOOD STRUT HINGE-B	066B
1	APRON STRUT BRACKET-L	067LEFT
1	APRON STRUT BRACKET-R	067RIGHT
2	PERFORMANCE GAS STRUT	STRUT/005



TOOLS & MATERIALS NEEDED	
DESCRIPTION	
FENDER APRON OR LARGE TOWEL	
1/4” DRIVE RATCHET	
1/4” DRIVE 10MM SOCKET	
1/4” DRIVE 11MM SOCKET	

Step 4 Tools: 1/4 Drive Ratchet, 11mm Socket

Remove the top bolt from your hood as shown in Fig. D.

*If installing Cervini's Hood Struts on a factory Ford hood you will use a 10mm Socket for this step.

Fig. D**Step 5 Tools: 1/4 Drive Ratchet, 11mm Socket**

Install hinge ball stud bracket (066A) as shown in Fig. E. Make sure you install the bracket with the bolt and washer on the outside of the bracket.

Fig. E**Step 6**

Install Cervini's Hood Struts by installing the bottom first, then the top. You will need to apply even pressure using the palm of your hand to clip the strut onto the ball stud as shown in Fig. F1 & F2.

Fig. F1**Fig. F2****Step 7**

After you repeat steps 1-6 on the right side of the vehicle your installation is now complete. Enjoy your new Cervini's Hood Struts!

Fig. G