




PART # 3353 2010-2011 C-SERIES FRONT BUMPER INSTRUCTIONS

Notice: Pre fit before painting! Install new, unpainted parts according to these instructions! Then remove parts, paint them and re-install! Painted or Altered Parts are Non-Refundable!



Step 1: Remove the factory bumper from the car. **(Keep the hardware because it will be reused)**

Step 2: Remove the two 10mm bolts that hold the plastic bumper support to the fender **as shown in fig.A**. Remove the bumper support and discard it you will not reuse it. Repeat this procedure to the other side of the car.

Step 3: Cut out the supplied template. Tape it to the bottom of the fender where the bumper meets. Carefully align the template with the back edge and out side roll of the fender **as shown in fig.B**. Use a center punch to mark center, than drill the holes out with a 5/16" drill bit.

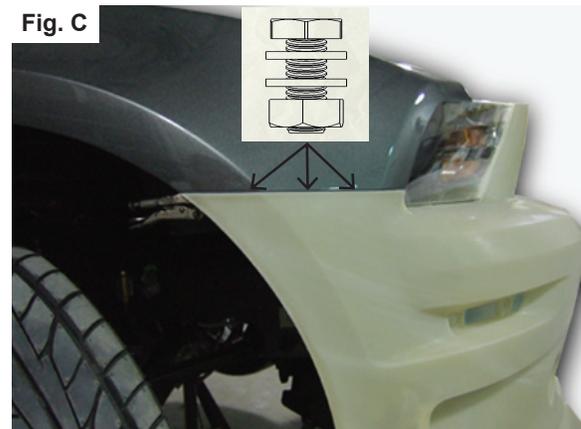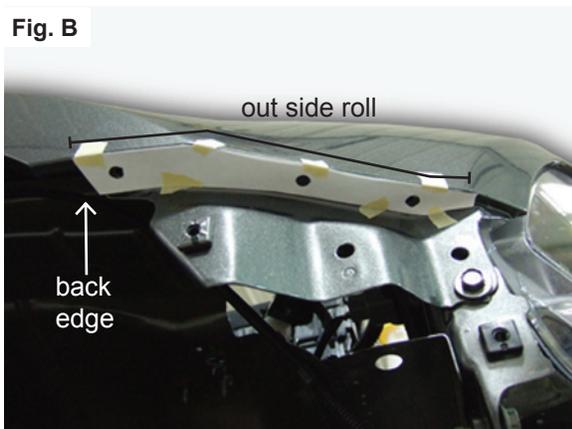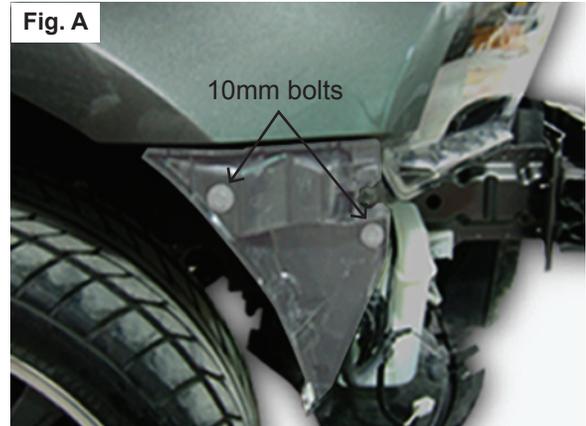

Step 4: The front bumper mounts in the factory locations with the factory hardware. Except for the fenders. Use the supplied 3/4" bolts, washers, and nuts in the predrilled locations **as shown in fig.C**. Remove four of the clip nuts from the bottom splash pan **as shown in fig.D**. **(You will reuse the bolts to install the lower bumper extension but not the clip nuts.)** Install the four supplied clip nuts to the lower bumper extension **as shown in fig.E**. Install it to the car using the factory hardware from the stock splash pan.

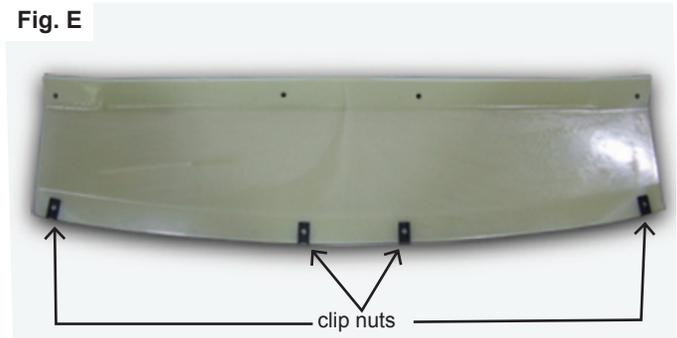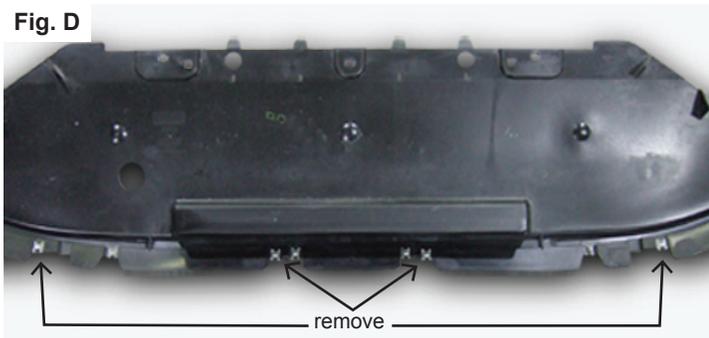


PART # 7256

2010-2011 C-SERIES UPPER BILLET GRILLE

Notice: Pre fit before installing! Install parts according to these instructions!
Altered Parts are Non-Refundable!

Step 1: Place the billet grille in the top mouth opening of the bumper. Center the grille in the mouth opening and make sure the grille bars are parallel to each other.

Step 2: Align the pre drilled holes in the billet grille with the pre drilled holes in the front bumper. Use the small black screws on the top of the grill and use the short philips screws on the bottom of the grille **as shown in fig.A.**

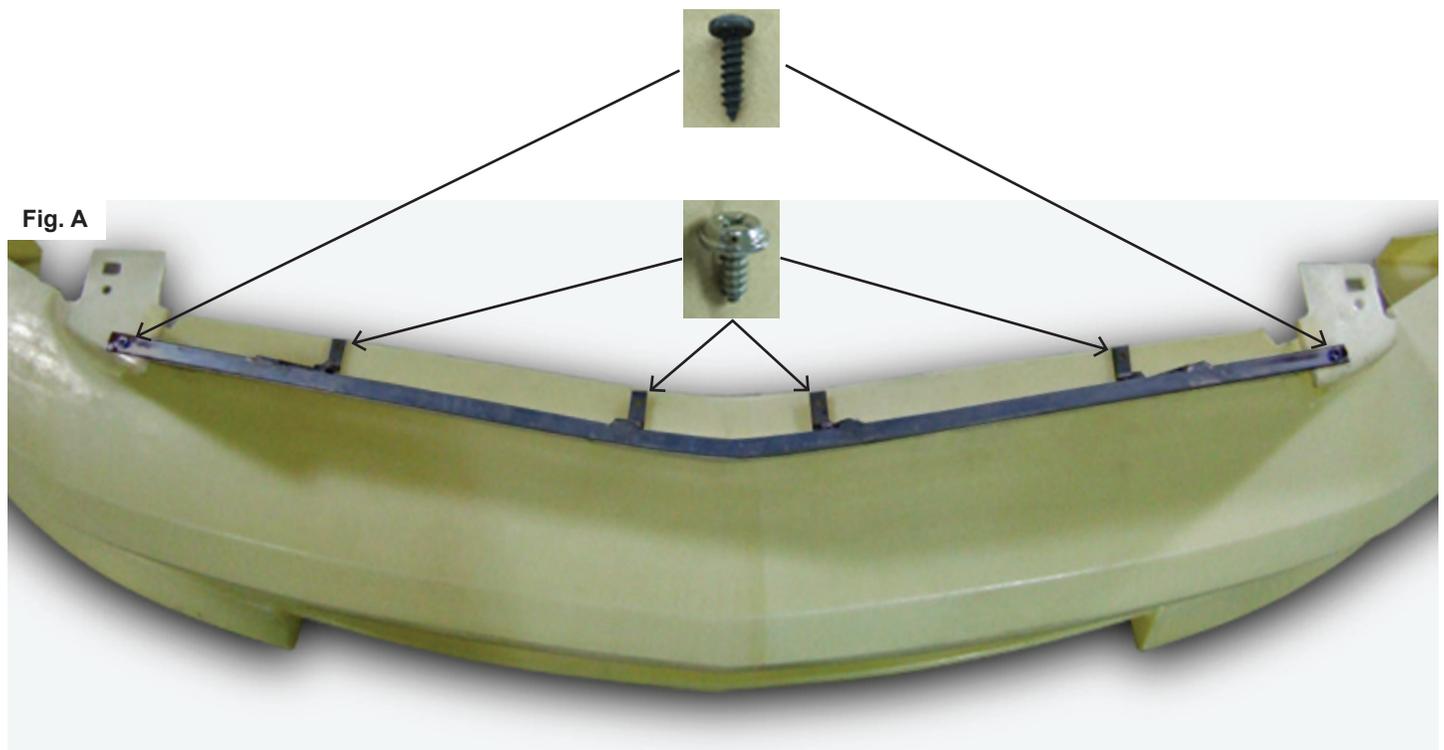



PART # 7256		
QTY	DESCRIPTION	HARDWARE #
2	SMALL BLACK SCREWS	90935A148
4	SHORT PHILLIPS	3265

PART # 7024,7026 & 7257 2005-2011 C-SERIES LOWER BILLET GRILLE




Notice: Pre fit before painting! Install new, unpainted parts according to these instructions! Then remove parts, paint them and re-install! Painted or Altered Parts are Non-Refundable!

Step 1: Place the lower billet grille in the lower mouth opening of the bumper. Center the grille in the mouth opening and make sure the grille bars are parallel to each other. Mark the mounting locations of the grille on the bumper and drill an 1/8" hole in the marked locations. Use the short Phillips screws to secure it in place.

Step 2: (Only if you have fog light option.) Align the light mounts, with the three holes in the back of the fog light bucket and snap it into place **as shown in fig.A**. With the tapered holes in the light bezel facing up, screw it to the light bucket **as shown in fig.B**. The light buckets have two steps on the back of them to help align it to the grille. Align the steps on the back of the light bucket to the pre drilled holes in the grille trim rings and screw it to the grille **as shown in fig.C**.

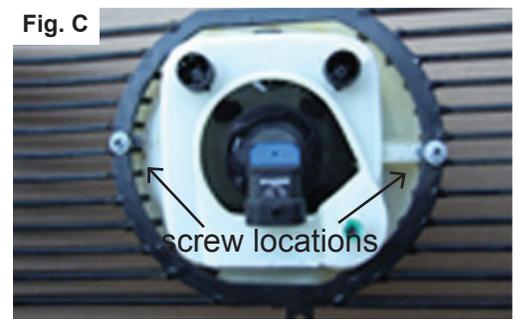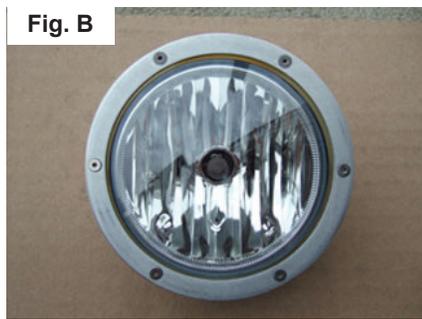

Step 3: The factory fog light wires must be cut and extended to reach the fog lights in the lower billet grille. Peel back the black wire loom and cut the wires five inches from the back of the plug **as shown in fig.D**. Strip a 1/4" off the cut ends of the plug wires and the extending wires that are provided in the hardware pack. Use the supplied butt connectors to connect the plug wires to the extending wires **as shown in fig.E**. (Black goes to black.) Use the supplied butt connectors to connect the extending wires to the factory wire harness **as shown in fig.F**. Wrap all the connections with electrical tape to keep moisture from getting to them.

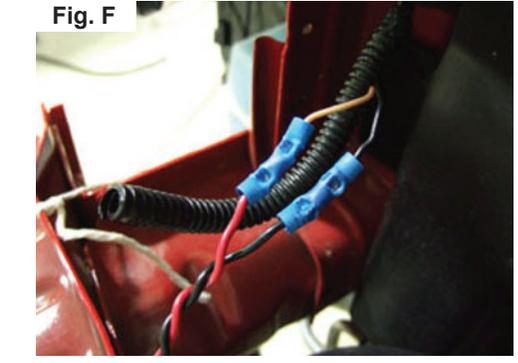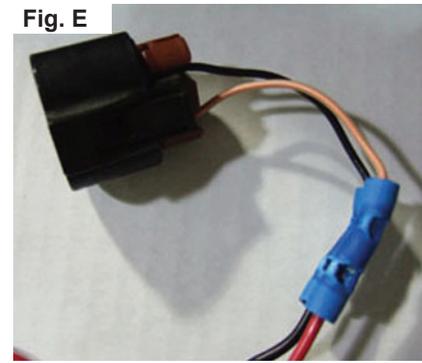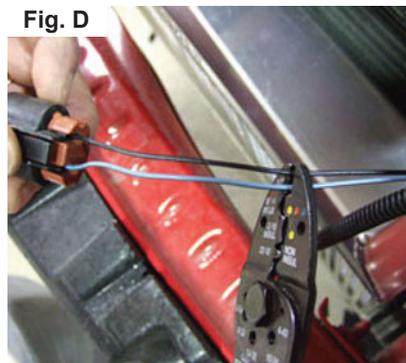

PART # 7024		
QTY	DESCRIPTION	HARDWARE #
8	SMALL PHILLIPS SCREWS	3265



PART #7026,7257		
QTY	DESCRIPTION	HARDWARE #
8	SMALL PHILLIPS SCREWS	3265
12	HEX HEAD SCREWS	992210A145
2	FOG LIGHT BUCKETS	7026, RA-LA
2	FOG LIGHTS	7015
4	LONG BLACK SCREWS	WE2623
2	2' LENGTHS OF BLACK WIRE	758K55
2	2' LENGTHS OF RED WIRE	758K55
2	ALUMINUM TRIM BEZELS	TEM-041
8	BUTT CONNECTOR	MC7227K13